 


Epson Printer Settings:

- Media Type: Photo Paper
- Mode: Select Custom and select Advanced.
- Advanced: Mode setting should be on Vivid.
- Print Quality: 720 dpi or 1440 dpi.
- Halftoning: Error Diffusion.

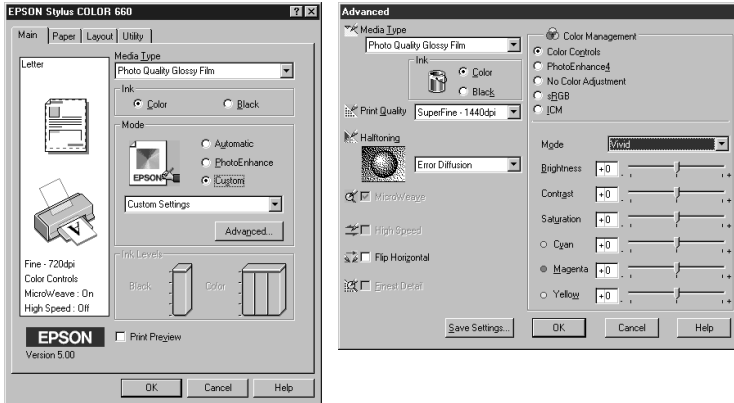

 
Canon Printer Settings:

- Mode: Photo.
- Media Type: Photo Paper



Hewlett Packard Printer Settings:

- Paper Type: Photo Paper or Other Photo Paper
- Print Quality: Best
- Photo Paper Printing: 600 x 1200 dpi.

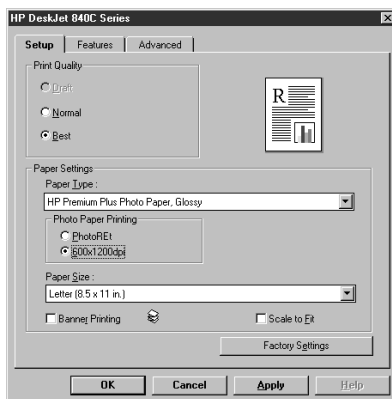

Technical Support:

If these suggestions have not answered your questions, please contact Memorex Technical Support by email at techsupport@memorex.com.

Handling

Handle labels by the edge to prevent fingerprints.

Printing

- Use heavy color saturation for best results.
- Printing full color will give your discs a unique look.
- Printing full color with your text reversed out will make your font stand out even more.

Applying

- Let your label dry for at least 10 minutes after printing before applying.
- Handle labels by the edge with dry hands.
- Apply using Memorex applicator.
- If bubbles appear you can use a safety needle to let the air out. Simply poke a hole where the air bubble is and use your dry hands to smooth out the surface.

Now you are set to show off your own custom CD label. Enjoy!